 


Motion Detector

USER GUIDE




Package Contents



Motion Detector



Bracket

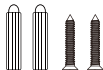


Screws x 2




User Guide

Appearance Design

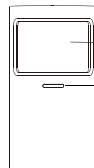


Front View


- Detection Window
- LED Indicator
 - Blue: Movement detected
 - Red: Low power

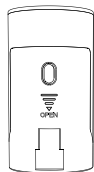

Back View

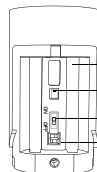


- 1.5V AA Battery x 2
- Anti-tamper switch
- Power ON/OFF

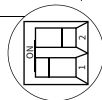


- ② Trigger time: 5s/5 min
- ① LED light switch

How to Install

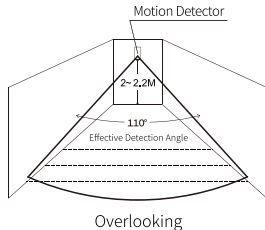


Mounting Height

Motion detector must be mounted 79 to 87 inches (2 to 2.2m) above the floor.

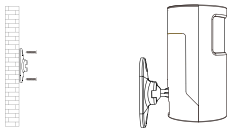

As shown above, install the bracket on the wall with screws. Then put the motion detector into the holder. Adjusts the angle of the motion detector detection range.

Detection Area

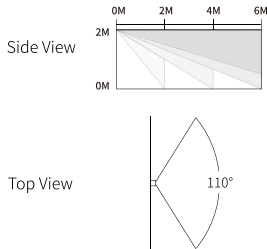

DIP Switch



Switch 1: LED Light Switch

ON: LED light on OFF: LED light off

Switch 2: Trigger Time: 5s/5 min

ON: 5 minutes delay for re-triggering
OFF: 5-second delay for re-triggering

Specifications

Battery Specification:	AA battery × 2
Standby Current:	≤10uA
Detection Angle:	110°
Working Temperature:	-10°C~+50°C

Warm Notice

- Do not install the motion detector outdoors to avoid exposure to rain.
- Motion detector cannot detect motion through glass, such as someone moving outside the window.
- Do not install the motion detector within 3 feet (1 meter) of heat sources such as electric heaters, vents or fireplaces or other heat sources that may create turbulent air.
- Do not install the motion detector behind large appliances or furniture that may affect its signal transmission.
- To avoid false alarms, make sure your pets can't get close to it.

